




ALARM CIRCUIT

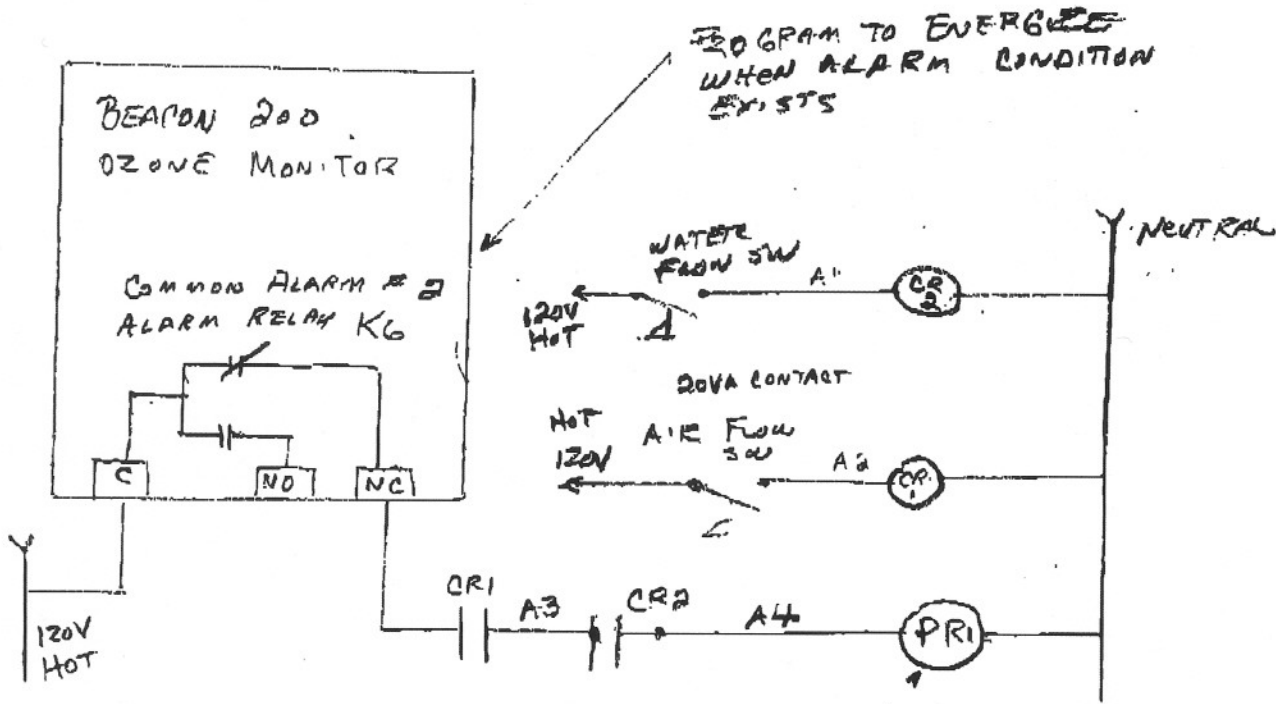

PROGRAM TO ENERGIZE WHEN ALARM CONDITION EXISTS

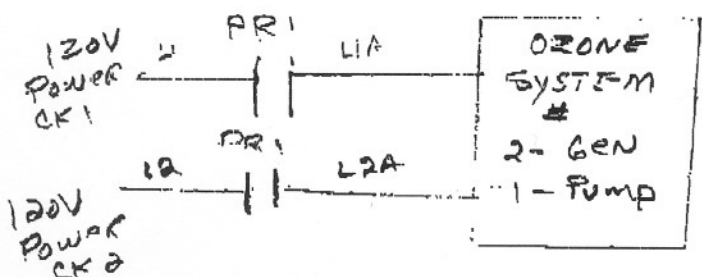

- MUST HAVE
1. WATER FLOW
 2. NO OZONE FAULT
 3. AIR FLOW

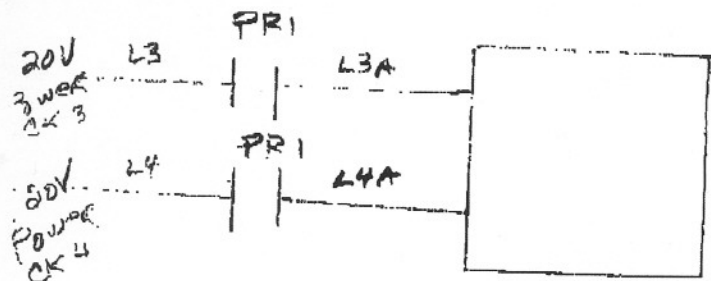

CEC THE OZONE '0
12-14-05
ENGINEERING
DEPT. RI